

# INTERCONNECT SYSTEMS

360-671-4444

360-428-4040

425-252-7979

1800-215-4040

## PREPARING AND PROGRAMMING YOUR VODAVI IP PHONE

- 1) Plug all cords into the phone:
  - 1 – handset cord
  - 1 – power cord
  - 1 – RJ45 cable into port marked LANPlug power cord into wall  
Plug RJ45 into network/internet connection
- 2) When display comes up and says:  
“No Response from MFIM [L]  
Set [\*] – Retry [#]”  
**Press \***
- 3) When display says:  
“[Local] – Change [#]”  
**Press # - Display will say [Remote]**  
**Press SAVE**  
**Press Volume ▲**
- 4) When display says DHCP:  
“[Disabled] – Change [#]”  
**Press # - Display will say [Enabled]**  
**Press Save**  
**Press Volume ▲**
- 5) PPPOE?  
“[Disabled]”  
LEAVE AS IS  
**Press Volume ▲**
- 6) Password:  
LEAVE BLANK  
**Press Volume ▲**
- 7) USER ID:  
LEAVE BLANK  
**Press Volume ▲**
- 8) INPUT DEVICE NUMBER:  
(This will be your 3 or 4 digit extension number)  
Press Save  
**Press Volume ▲**
- 9) MFIM IP Address (Dot:\*)  
(---.---.---.---)  
**Press Save**  
**Press Volume ▲**  
(This is the address of the IP card in the phone system.)
- 10) Router IP Address (Dot:\*)  
(---.---.---.---)  
**Press Save**  
**Press Volume ▲**  
(This is the address of the router on the network.)
- 11) Phone Net Mask (Dot:\*)  
(---.---.---.---)  
**Press Save**  
**Press Volume ▲**  
(This is the subnet address of the router on the network.)
- 12) Phone IP address  
LEAVE BLANK  
**Press Volume ▲**
- 13) Display will revert to:  
“[Remote] – Change [#]”  
**Press SPEAKER**  
Phone will Acquire IP address and then connect to system.  
(Items 9, 10, and 11 will be provided by your Network Administrator or Interconnect Systems.)