

INTERCONNECT SYSTEMS

360-671-4444

360-428-4040

425-252-7979

1800-215-4040

PREPARING AND PROGRAMMING YOUR VODAVI IP PHONE

- 1) Plug all cords into the phone:
 - 1 – handset cord
 - 1 – power cord
 - 1 – RJ45 cable into port marked LANPlug power cord into wall
Plug RJ45 into network/internet connection
- 2) When display comes up and says:
“No Response from MFIM [L]
Set [*] – Retry [#]”
Press *
- 3) When display says:
“[Local] – Change [#]”
Press # - Display will say [Remote]
Press SAVE
Press Volume ▲
- 4) When display says DHCP:
“[Disabled] – Change [#]”
Press # - Display will say [Enabled]
Press Save
Press Volume ▲
- 5) PPPOE?
“[Disabled]”
LEAVE AS IS
Press Volume ▲
- 6) Password:
LEAVE BLANK
Press Volume ▲
- 7) USER ID:
LEAVE BLANK
Press Volume ▲
- 8) INPUT DEVICE NUMBER:
(This will be your 3 or 4 digit extension number)
Press Save
Press Volume ▲
- 9) MFIM IP Address (Dot:*)
(---.---.---.---)
Press Save
Press Volume ▲
(This is the address of the IP card in the phone system.)
- 10) Router IP Address (Dot:*)
(---.---.---.---)
Press Save
Press Volume ▲
(This is the address of the router on the network.)
- 11) Phone Net Mask (Dot:*)
(---.---.---.---)
Press Save
Press Volume ▲
(This is the subnet address of the router on the network.)
- 12) Phone IP address
LEAVE BLANK
Press Volume ▲
- 13) Display will revert to:
“[Remote] – Change [#]”
Press SPEAKER
Phone will Acquire IP address and then connect to system.
(Items 9, 10, and 11 will be provided by your Network Administrator or Interconnect Systems.)